

- NOTES:**
- 1) INSTALL ANODE A MINIMUM OF 10 FEET (HORIZONTAL) FROM PIPELINE OUT OF TRAFFIC PATH.
 - 2) BACKFILL ANODES WITH NATIVE MATERIAL PER MANUFACTURERS INSTRUCTIONS.
 - 3) LAY PLASTIC WARNING TAPE 6" OVER CABLES FOR ALL HORIZONTAL RUNS.
 - 4) PROVIDE SUFFICIENT SLACK IN CABLES TO ALLOW REMOVAL OF TERMINAL BOX FROM VALVE BOX. A MIN. OF 24" ABOVE TOP OF BOX.

PARTS LIST:

6	CABLE FOR DIRECT BURIAL NO. 8 AWG HMWP COPPER WIRE.
5	CONNECTOR
4	ANODE
3	TERMINAL BOX, COTT, "LITTLE FINK" (FOR MULTIPLE ANODES AND CASING APPLICATIONS USE "BIG FINK")
2	CAST IRON TRAFFIC COVER, MARKED "GPS CONCRETE VALVE BOX CHRISTY, FB (8-1/2"x11-3/4")
1	NORTH MARIN WATER DISTRICT NOVATO, CALIFORNIA


SACRIFICIAL ANODE INSTALLATION

APPROVED	DATE	REV.	STD. NO.
	5/10/02	1	12

THIS STANDARD REPLACES NMWD STD-A-17

SECTION
N.T.S.

5 CONNECTOR

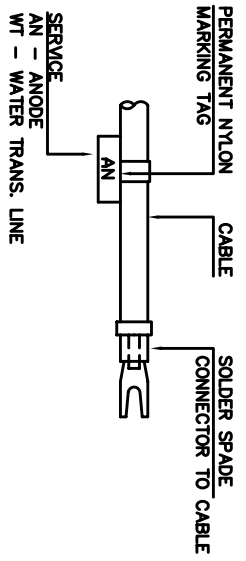

SECTION
N.T.S.

5 CONNECTOR

THIS STANDARD REPLACES NMWD STD-A-17

APPROVED	DATE	REV.	STD. NO.
	5/10/02	1	12